
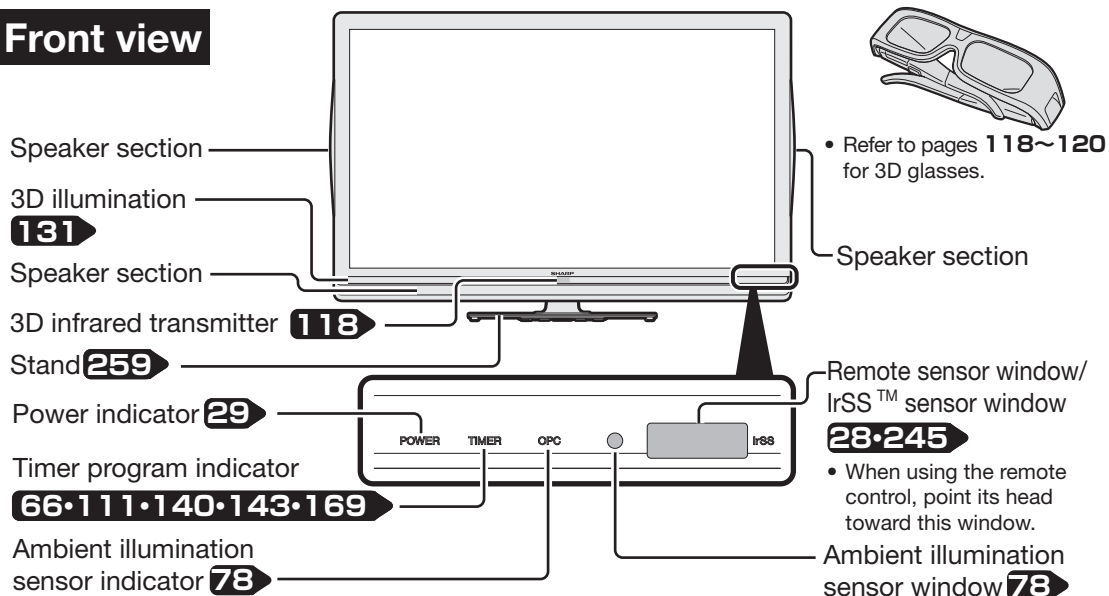


English Guide

Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view



Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.


Right side view

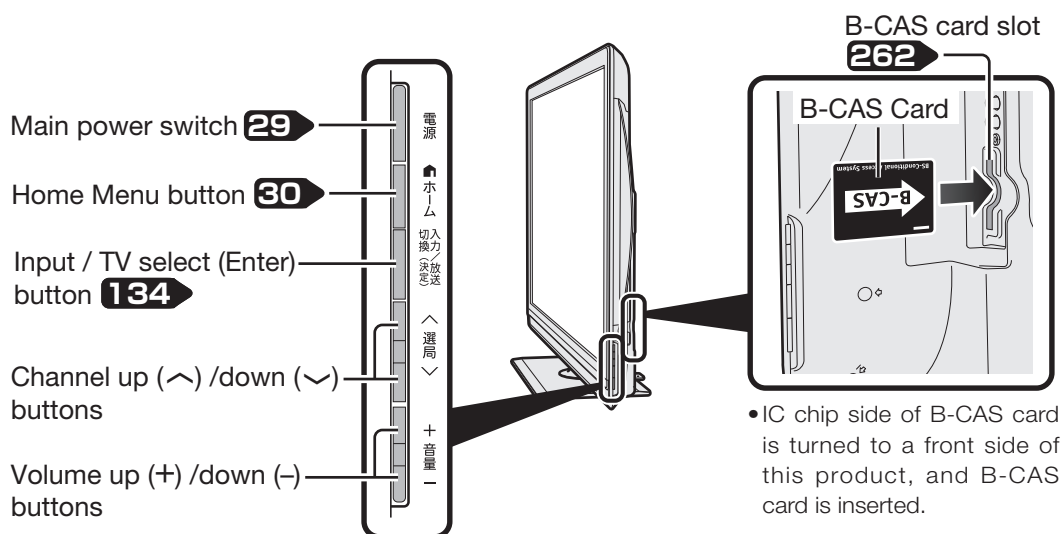

Back view

The illustrations below are those of LC-52LV3.

LC-60LV3/LC-46LV3/LC-40LV3 has the same layout of jacks and terminals as LC-52LV3.

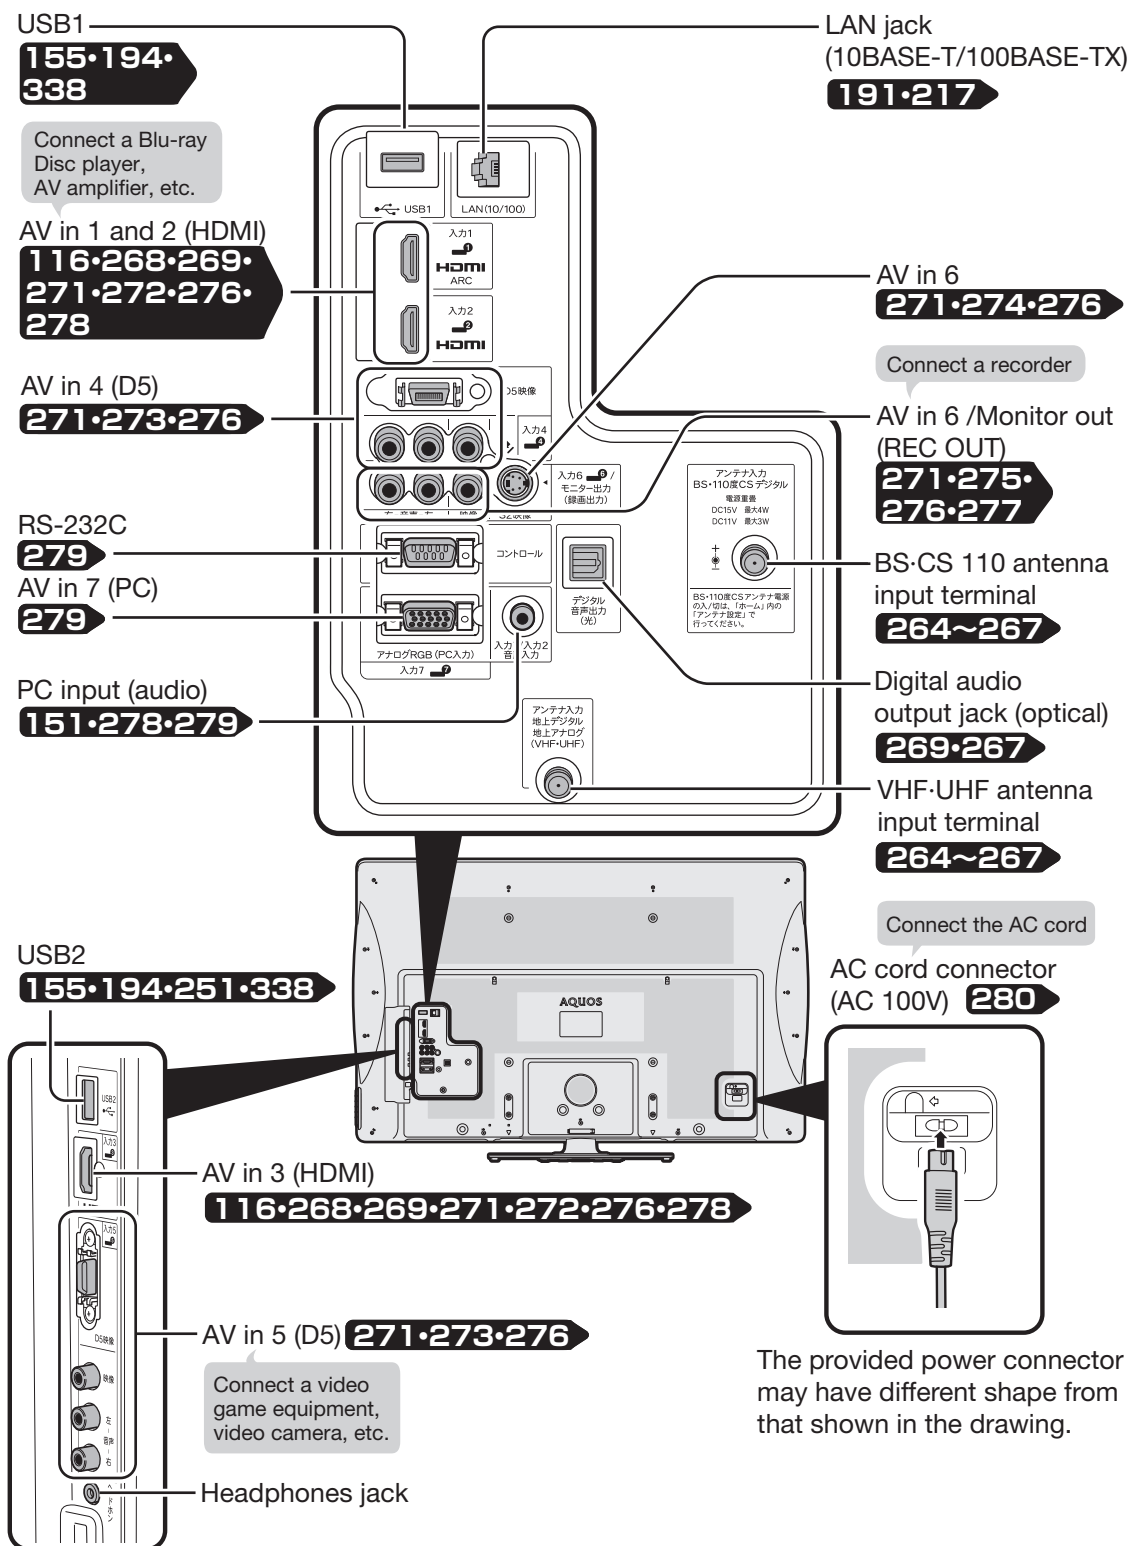

Remote Control Unit

See Page 36 for how to select a program.

Active/Standby 29

Press to engage the TV set in the active or standby mode.

Recommended programs select 54~56

Press to select a program which the TV set recommends.

Display 40-41-343

Press to display or turn off the channel call, etc.

CATV 38

Digital channel number input

Freeze 42

AV mode select 73

3D 123~126-128-132-133

Press to switch to 3D mode when the TV set receives a 3D signal.

Channel select 36-222

- Press to select a channel.
- Use to input a number for various settings.

Terrestrial analog/Terrestrial

Digital/BS/CS 36

Select the CS digital channel for the first time. 288

Mute 36-222

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Volume up (+)/down (-) 36-222

Press to adjust the volume.

EPG 47-110-140-168

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast. Select a future program in EPG to set a timer program.

Finish

Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Sleep timer 92

Media select 36-39-223

Familink

106-108-109-112-113-116-164-166-167-178-179-181

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

Display the operation panel of VOD 227-231-241

View the Internet or IPTV 207-222-226-228-230

Audio select 57-58-223

Picture select 58

Caption 58-223

3D brightness adjustment 130

Each time you press this button the brightness of 3D images is adjusted.

3D surround adjustment 130

Each time you press this button the surround effect of 3D mode is adjusted.

Input select 134

Channel up (^)/down (v) 36-45-222-304-305

Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

Display the "Home" Menu 30-31

Cursor (up, down, left, right) 30-31

Enter/Confirm 31

Return

Display the Tool Menu 34

Linked data broadcast 39-223

Color

39-48-49-98-122-123-125

Use to operate EPGs, 3D mode and data program screens.



Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。



◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press
 and
select
with

Select “設定” (Setup) on
the Home menu.

ホームメニューから「設定」
を選ぶ



2

Select
with

Select “ (視聴準備)”
(View Setting).

「 (視聴準備)」を選ぶ




3

Select
with

Press

Select “Language(言語)”.
「Language(言語)」を選ぶ

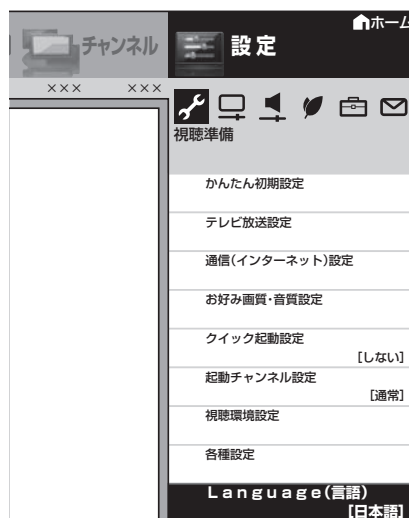

4

Select
with

Press

Select “English”.
「English」を選ぶ

Enter.
決定する



5

Press

Finish this operation.
終了する

- The menu screen is now displayed in English.
- 画面表示が英語になります。

はじめに
お読みください

テレビを見る／
便利な使いかた

ファミリーリンク

3D映像を見る

ビデオ・オーディオ・
パソコンをつなぐ

USBハードディスク
をつないで録画・見る

インターネット／
ホームネットワーク

設置・接続・
受信設定

故障かな？／
お役立ち情報

English
Guide